



ASSEMBLY INSTRUCTIONS

You can take the Galactic Robot apart and put it back together.

Important: You must replace the arm lever as shown to make sure the Robot operates properly.

BATTERY INSTALLATION

You need 2 “AA” batteries (not supplied) to power the Galactic Robot. We recommend alkaline batteries, such as RadioShack Cat. No. 23-552.

1. Use a Phillips screwdriver to remove the screw on the battery compartment cover, then remove the cover.
2. Match the + and – marks inside.

3. Close the cover and secure it with the screw.

OPERATING INSTRUCTIONS

Press and hold the left button. The Robot walks forward.

Press and hold the right button. The Robot walks backward.

CARE & MAINTENANCE

To enjoy your Galactic Robot for a long time:

- Keep it out of dirt and water.
- Clean it with a damp cloth to keep it looking new.
- If something is wrong with it, take it to your local RadioShack store for assistance.

Cautions:

- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Robot. If you plan not to use it for a few days, remove the batteries.
- Dispose of batteries properly; do not bury or burn them.

Bar Code
Position

